


AC Isolator Switch

Installation Instructions


LAS-xx/3P(T) series LAS-xx/4P(T) series

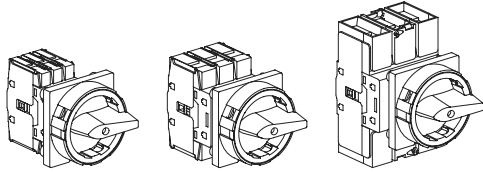


Important Notes:

- Please read this manual carefully before installing or operating the product. If you have any questions, please contact our company.
- Unauthorized disassembly of the product is strictly prohibited to prevent instrument failure or malfunctions.


Installation

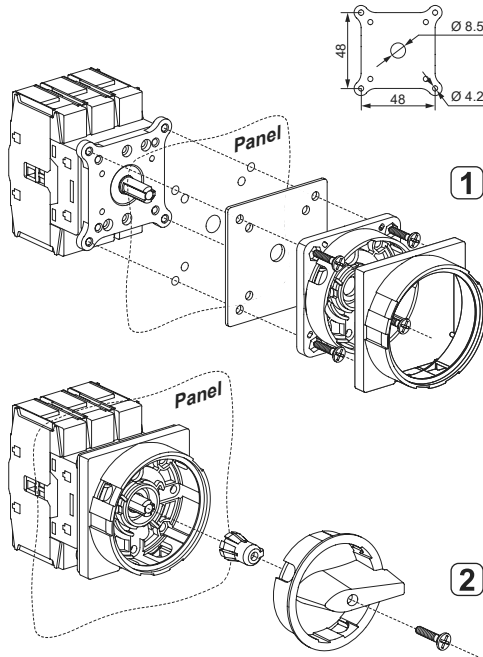

Working Conditions

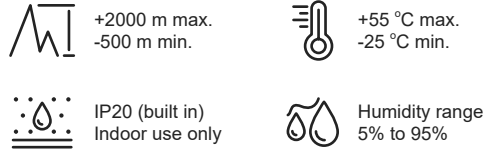


Contacts Wiring Draph

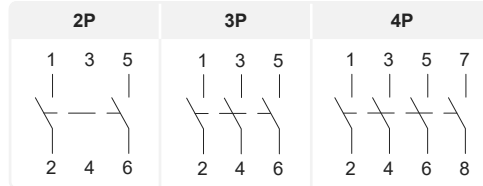

4 Ploe Installation

With the handle in the "ON" position, align the three-phase and N-pole components with the dashed reference line indicated in Step 1, then secure the N-pole by pushing in the direction of the arrow shown in Step 2.

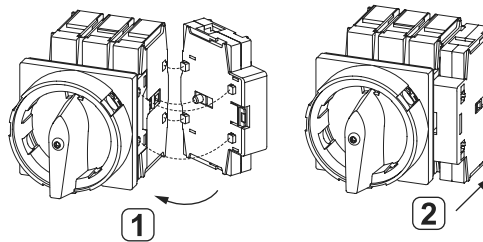


Characteristics


Electrical Characteristic	LAS-16	LAS-20	LAS-25	LAS-32	LAS-40	LAS-63	LAS-80	LAS-100	LAS-125
Rated Operational Current I _o (AC-21A / AC-21B)	16 A / 16 A	20 A / 20 A	25 A / 25 A	32 A / 32 A	40 A / 40 A	63 A / 63 A	80 A / 80 A	100 A / 100 A	125 A / 125 A
Rated Operational Current I _o (AC-22A / AC-22B)	16 A / 16 A	20 A / 20 A	25 A / 25 A	32 A / 32 A	40 A / 40 A	63 A / 63 A	80 A / 80 A	100 A / 100 A	125 A / 125 A
Rated Operational Current I _o (AC-23A / AC-23B)	16 A / 16 A	20 A / 20 A	25 A / 25 A	32 A / 32 A	40 A / 40 A	63 A / 63 A	80 A / 80 A	100 A / 100 A	125 A / 125 A

Dimensions

LAS-40/3P(T) & LAS-40/4P(T)

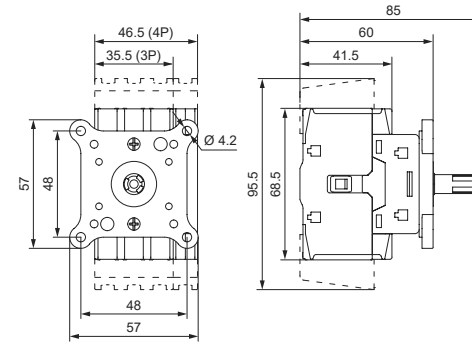

LAS-80/3P(T) & LAS-80/4P(T)

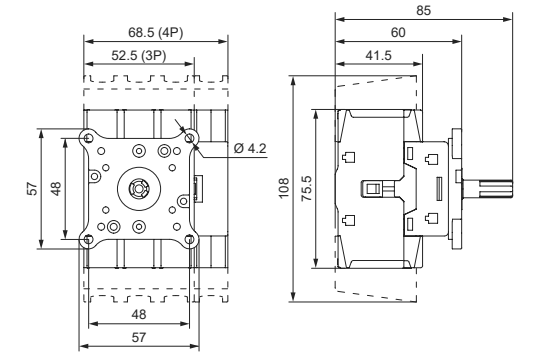

LAS-125/3P(T) & LAS-125/4P(T)

